

Components:

Breeze (All-In-One POS) WS01



Computer name: WS01 (Server) Windows Login: user01
The server should be placed on the primary lane (the one that is used more often)
Com Ports: COM1, COM2 and COM4 (COM3 in use by Customer Display)
Other Ports: LAN, PS2 and 4 USB Ports

Keyboard and Mouse



Comm. Cable to Breeze: USB ports one for each

Components:

Barcode Scanner



Comm Cable to Breeze: PS2

Receipt Printer



Ports: RJ11 (for Cash Drawer)
Comm. Cable to Breeze: COM1 (for both WS01 and WS02)

Cash Drawer



Comm. Cable to Receipt Printer: RJ11

Components:

Mercury Dial Bridge



Comm. Cable to Breeze: COM2

WARNING: Store the Dial Bridge out of reach from possible fluid spills.

Modem



Comm. Cable to Breeze COM4
Not shipped, use existing equipment.

Components:

UNINTERRUPTIBLE POWER SUPPLY (UPS)



WS01 CONNECTION DIAGRAM




Remove line going in to existing credit card machine and place it in the Mercury Dial Bridge

Line from wall



Breeze WS01

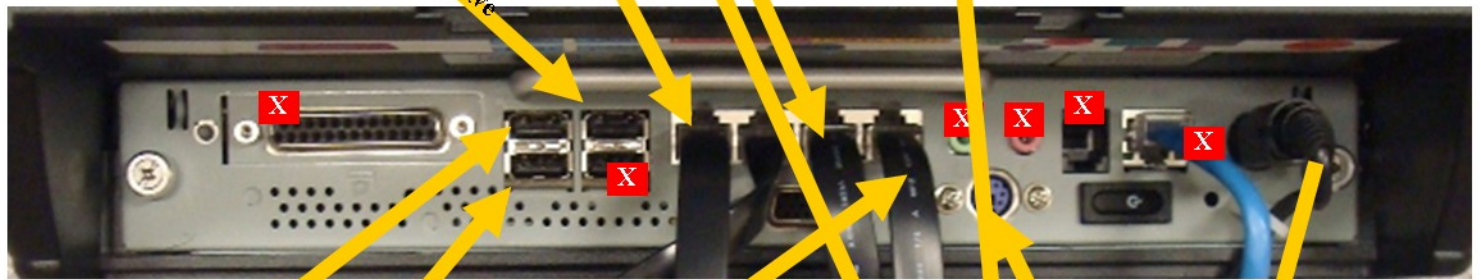


USB Flash Drive


Keyboard/Mouse



Receipt Printer

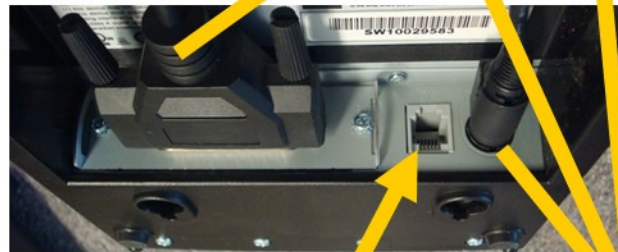

Barcode Scanner

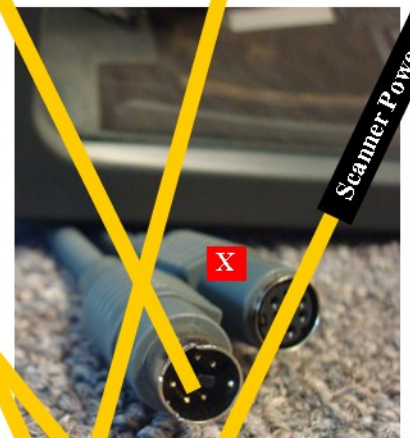

Scanner Power Cord

Cash Drawer



UPS



SYSTEM TESTS:

Call 203-374-4517 before testing.

#1 Enable Support Button (Verify Epson TM-88 Partial Cut is default printer and Add Sched. Task DisableSupportAndPolling 7:29am)

Note: If you do not hear from us for five minutes into this test and you do not see activity on the screen, press “Disable Support and Polling” button on Management functions screen, then call us back.

#2 Ring up a cash sale:

- Verify the customer display is working.
- Verify the barcode scanner works.
- Verify the receipt printer works.
- Verify the cash drawer opens.

#3 Ring up a Credit Card Sale

- Verify the Mercury Dial Bridge Dials Out and obtains a C/C authorization code.
-

#4 Void both test transactions. The Mercury Dial Bridge will dial out to void the credit card transaction.

#5 Enable Polling Button

Note: If you do not hear from us five minutes into this test and you do not see activity on the screen, press “Disable Support and Polling” button on Management functions screen, then call us back.